

*INOR Connect is available
for both Android and iOS*



INOR ICON-BT KIT

Distributor - ThermX Southwest 7370 Opportunity Road, Suite S, San Diego, CA
92111-1414 (800) 284-3769 sales@thermx.com

INOR

ICON-BT Kit

Included:

- ICON-BT
- USB-cable
- Batteries
- User instruction


Art. Nr. 70CFGBT001



ICON-BT



*Remote configuration
and monitoring via
Bluetooth®*

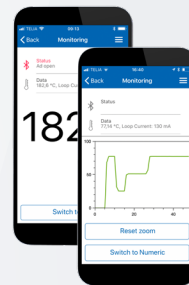

App: INOR Connect

Intended use

ICON-BT is an Interface for wireless communication between portable devices (e.g. smartphone) and INOR temperature transmitters. It can be used in ambient temperatures of -20... +50 °C / - 4...+122 °F.

Inserting batteries

1. Open the sliding lid at the back of the ICON-BT.
2. Insert the two AAA batteries (supplied) into the interface. Make sure that the + and - ends are in the correct position.

Establish communication via ICON-BT interface

1. Download the app INOR Connect from App Store or Google Play Store and install it on your device.


2. Set Bluetooth communication to ON in your portable device (e.g. smartphone)
3. Connect the ICON-BT to the transmitter using the supplied cable, see images below.



ICON-BT connected to a head mounted and a rail mounted transmitter.

4. Start INOR Connect on your device.

5. You can now manage the transmitter via the app and choose from four options at the main screen.

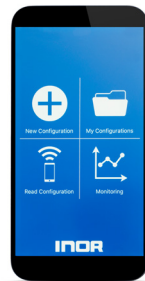

6. When selecting *Read Configuration* or *Monitoring*, the app will scan for available devices and show them in a list. Click on the device you want to connect to. The name of your ICON-BT is the same as the serial number, which can be found on the product label.



DISPOSAL OF USED PRODUCT AND BATTERIES

This product contains electronics covered by the European Directive 2012/19/EU and batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of electronics and batteries because correct disposal helps to prevent negative consequences for the environmental and human health. You can also return the product(s) and used batteries to us – Inor Process AB



LEGAL NOTICE!

Disposal must be carried out in accordance with legislation applicable in your country.



For complete documentation (manuals, supplementary manuals, data sheets and certificates) please refer to: www.inor.com/download/